

Low Dose-rate Irradiation of RD53A Chip//Update

Students Instrumentation Meeting






May 29, 2020

Aleksandra Dimitrievska, Maurice Garcia-Sciveres,
Timon Heim, Simone Pagan Griso

Lawrence Berkeley National Laboratory

SLIPPER: SLow Irradiation of Phase-II PixEl Readout

- Shown on May 8, wrong legend for the RO frequency, which made wrong calculation of the gate delay...

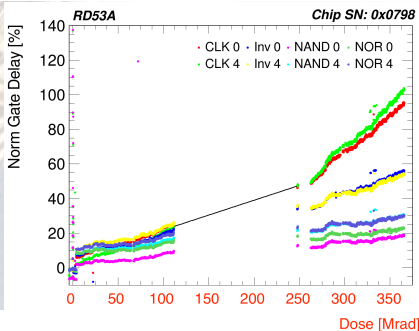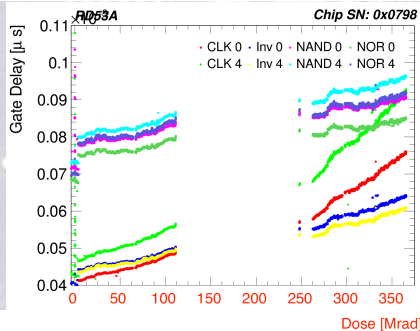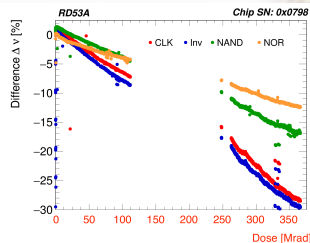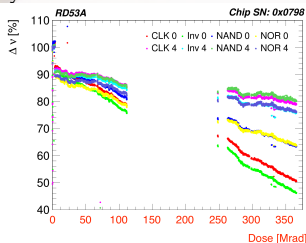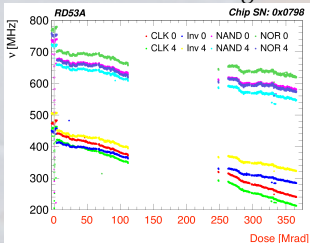

SLIPPER: SLow Irradiation of Phase-II PixEl Readout



- Shown on May 8, wrong legend for the RO frequency, which made wrong calculation of the gate delay...

$T_D = 1/(N \cdot \nu)$, where N is number of cells

15.11 Ring Oscillator Assignments






| ROSC Nbr. | Type | Len. | ROSC Nbr. | Type | Len. |
|-----------|---------------------------|------|-----------|------------------------|------|
| 0 | Strgth. 0 inv. clk. drvr. | 55 | 4 | Strgth. 0 4-input NAND | 19 |
| 1 | Strgth. 4 inv. clk. drvr. | 51 | 5 | Strgth. 4 4-input NAND | 19 |
| 2 | Strgth. 0 inverter | 55 | 6 | Strgth. 0 4-input NOR | 19 |
| 3 | Strgth. 4 inverter | 51 | 7 | Strgth. 4 4-input NOR | 19 |

Table 37: Bank A ring oscillator types and lengths (in number of gates). The given lengths result in a typical frequency of about 600 MHz before irradiation. Each oscillator has its own Enable bit.

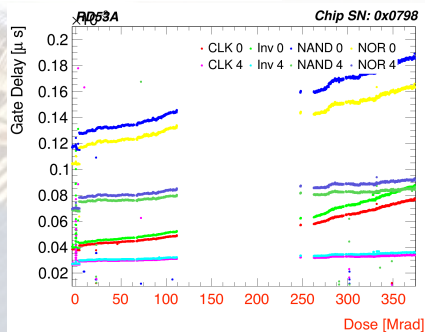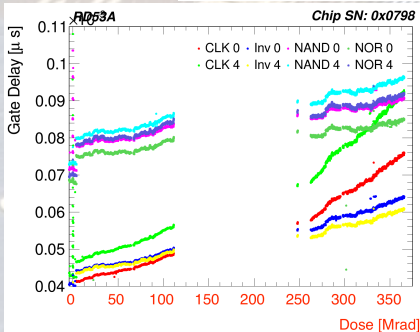



SLIPPER: SLow Irradiation of Phase-II PixEl Readout

○ Corrected

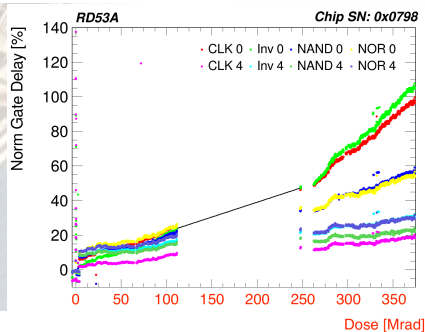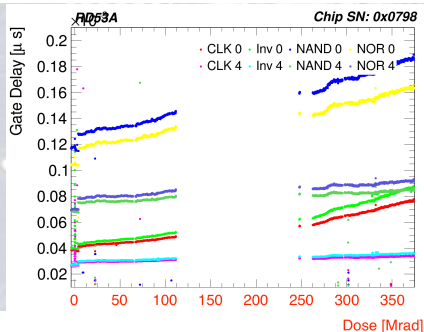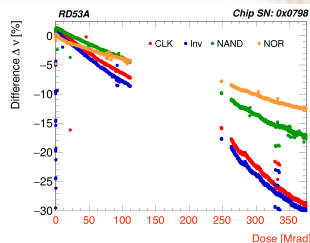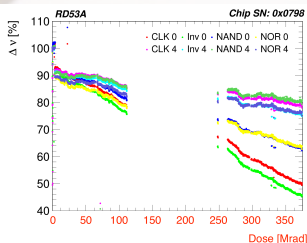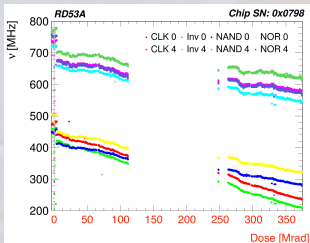






SLIPPER: SLow Irradiation of Phase-II PixEl Readout

- Correction of the 10 % drop
- Same change for all gates:

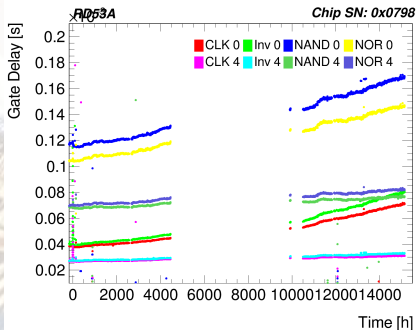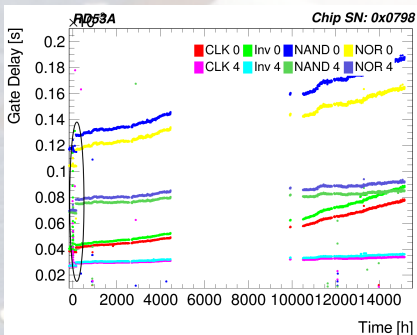






SLIPPER: SLow Irradiation of Phase-II PixEl Readout

○ Latest results: 375 Mrad total, dose rate: 25 krad/h

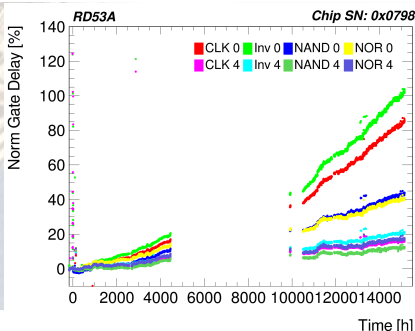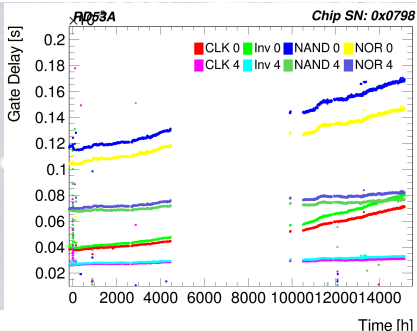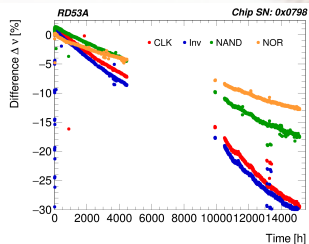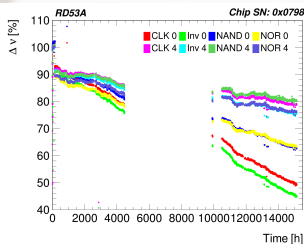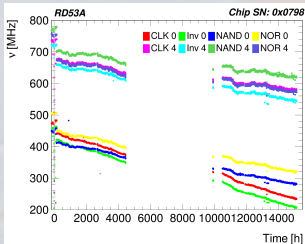





SLIPPER: SLow Irradiation of Phase-II PixEl Readout

- Latest results: 375 Mrad total, dose rate: 25 krad/h

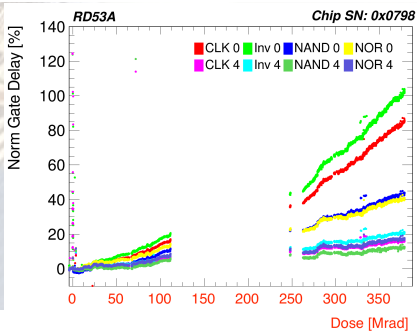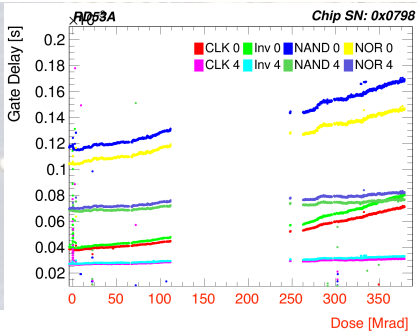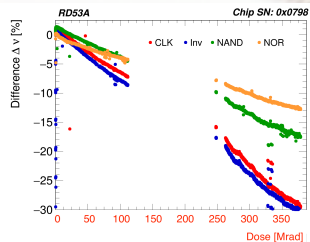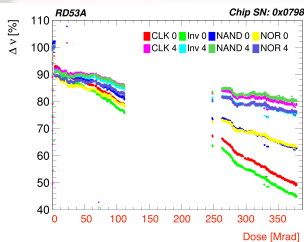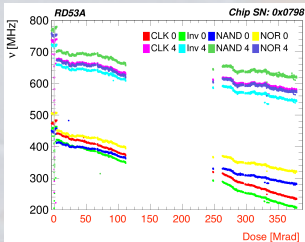




SLIPPER: SLow Irradiation of Phase-II PixEl Readout

○ Comparing to high dose rate x-ray irradiation

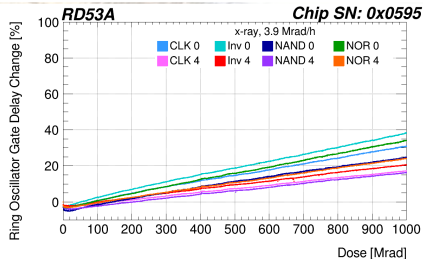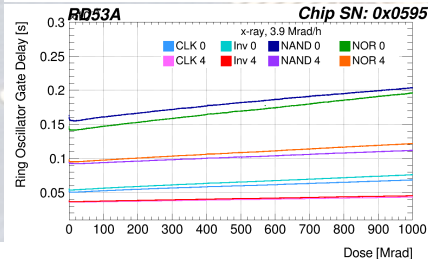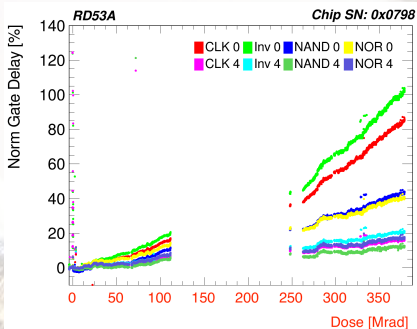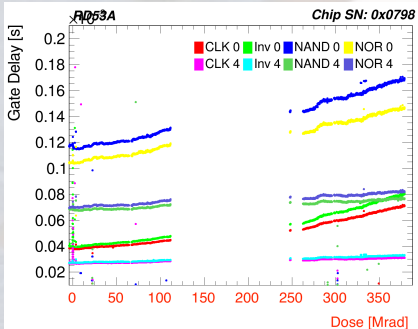

SLIPPER: SLow Irradiation of Phase-II PixEl Readout

- Implementing corrections:
 - RO frequency/delay vs V_{dd}
 - Dose correction due to activity of the Kr-85 source: 0.75 % per month

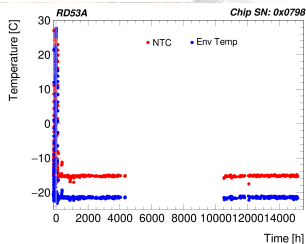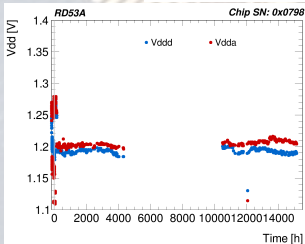
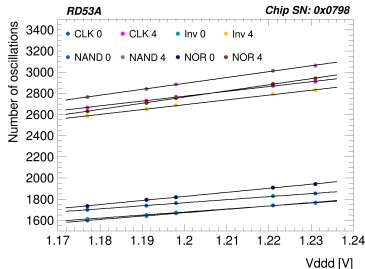




BACKUP

Radiation Damage




- Radiation damage models:
 - RD53A: only standard threshold **single transistors models** irradiated at room temperature (200 Mrad)
 - RD53B: based on newer and more extensive cold irradiation and test data (100, 200, 500 Mrad at 25C, 0C, -30C)
- However the models work only for analog part (large transistors where the damage is independent of the dose rate)
- For the digital part (small transistors), the dose rate has a big impact
 - all models are for high dose rate
 - no data and no simulation to predict the high total dose damage at HL-LHC
 - from single transistor measurements (F. Faccio and G. Borghello) after 10-20 Mrad the damage at low dose rate is approximately twice worse than at high dose rate

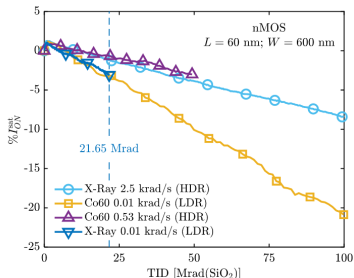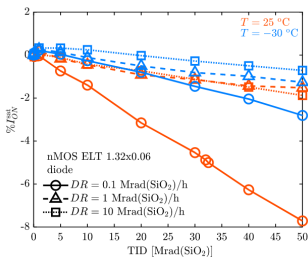

Slipper SLOW Irradiation of Phase-II Pixel Readout

- Beta Kr-85 sources: 60 mCi (2.22 GBq), the dose is about 7 rad/s.
- Irradiation with one RD53A chip started on September 6, 2018
- Total dose: about 220 Mrad
- Position of the source:

on top of the **linear** and **differential** FE, **synchronous** FE is not receiving the full dose

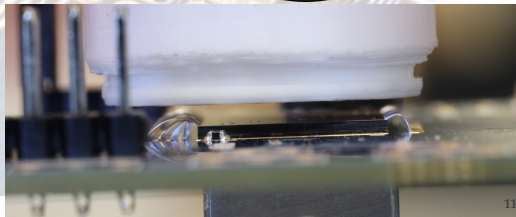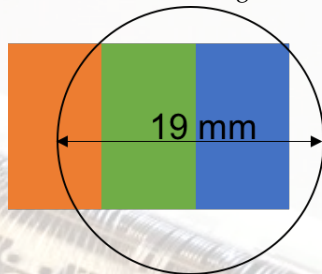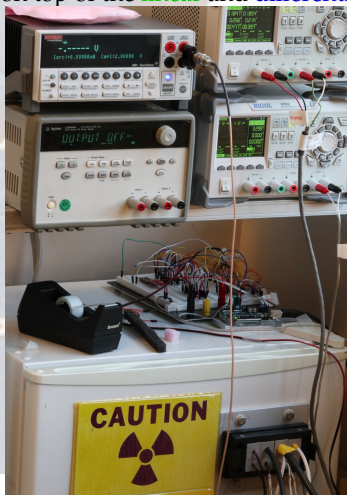

Slipper SLow Irradiation of Phase-II Pixel Readout

SOFTWARE

- Monitoring and data acquisition code:
<https://gitlab.cern.ch/berkeleylab/slipper-monitoring-sw>
- Combines: Yarr, labRemote (control power supplies, multimeters), mysql

TESTING PROCEDURE





- Keep chip busy all the time (noise scans with global pulse for ring oscillators)
- Perform scans every hour (threshold, tot, MUX, ring oscillators)
- Tuning (1ke, 7 ToT at 10k e) once a day
- Monitor environmental conditions, humidity and temperature, voltage outputs from the chip every minute via Arduino
- Monitor input current of the chip
- The data is stored in database: Arduino, Chip and Log tables.

PREVIOUS UPDATES

- https://indico.cern.ch/event/774154/contributions/3238373/attachments/1766695/2869089/LowDoseRate_RD53Collaboration.pdf
- https://indico.cern.ch/event/790618/contributions/3329338/attachments/1801647/2938843/LowDoseRate_20190225.pdf
- FDR of the Pixel Readout Chip https://indico.cern.ch/event/835605/contributions/3502871/attachments/1904035/3151043/Dimitrievska_RD53APixelReadoutChip_TestResults.pdf




Ring oscillators

- Eight ring oscillators (bottom right corner of the chip)
- Each oscillator drives a 12-bit counter, enabled for a known amount of time set by configuration, dependence on temperature and V_{dd}
- Calculate the frequency ν or delay $T_D = 1/(N \cdot \nu)$ (N - number of cells)

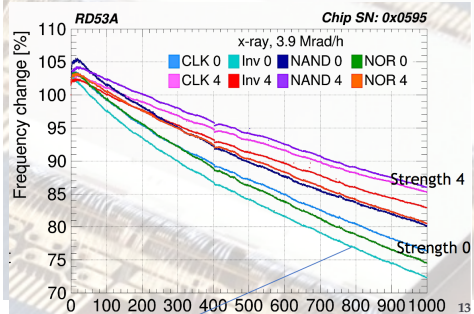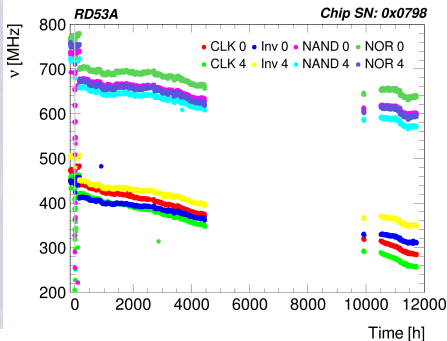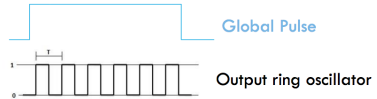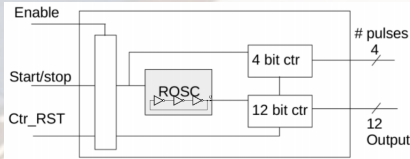


Dose Calibration

- USE RING OSCILLATORS AS DOSIMETERS
- The **difference** between the gates with driving strengths 4 and 0
- Compare to X-ray irradiation results
 - Glasgow (high dose rate) 500 and 1000 Mrad
 - CERN (high dose rate) up to 80 Mrad
 - CERN (low dose rate) 8 Mrad

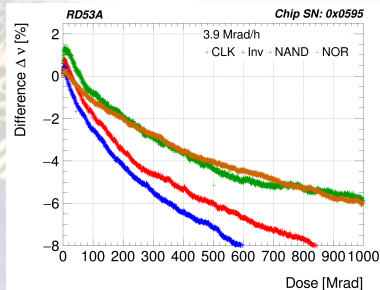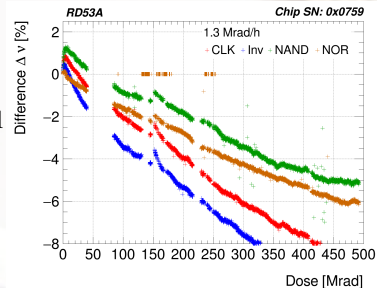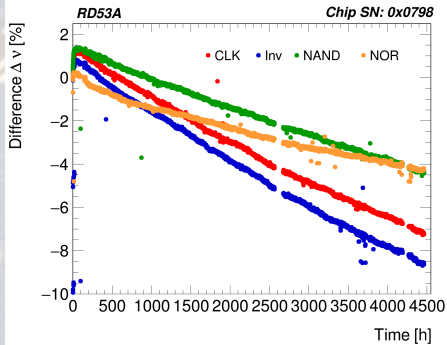


- Extract the values when the lines are crossing 0:
when the irradiation effects are the same for the gates with driving strengths 4 and 0
(when lines don't cross, linear fit after the peak and extract value when $y=0$)




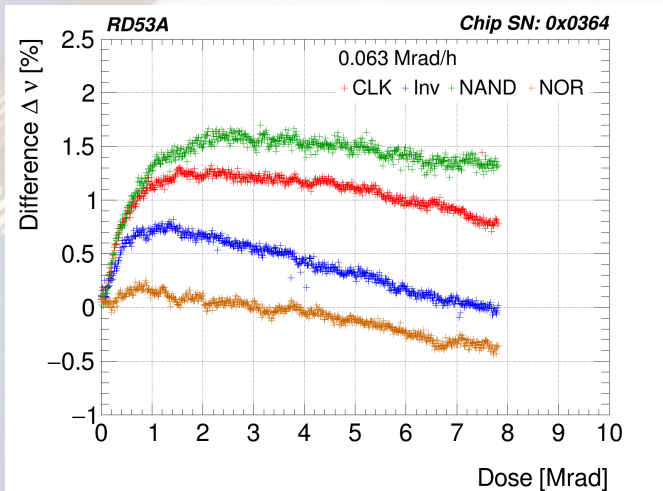


Estimation of the dose rate for Kr-85 source from x-ray irradiations




- Kr85 estimated dose rate is: 0.025 Mrad/h
(back on the envelope calculation from the activity and opening window)
- Change due to activity of the source: 0.75 % per month
- Kr-85 dose rate estimation from the 0.063 Mrad/h x-ray irradiation:
0.030 Mrad/h (Clock), 0.021 Mrad/h (Inverter),
0.031 Mrad/h (NAND), 0.048 Mrad/h (NOR)

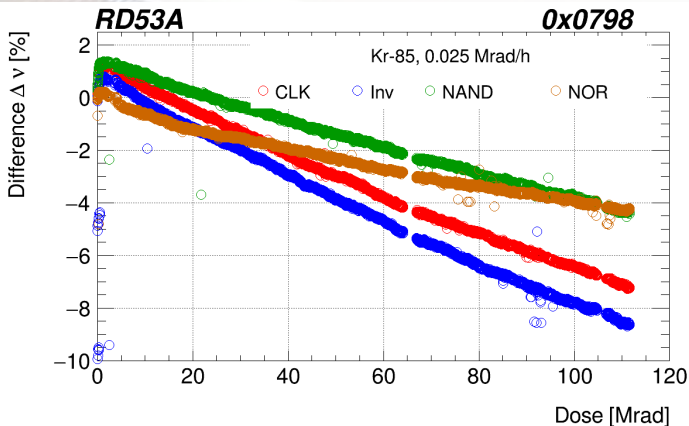

Comparing high and low dose rate

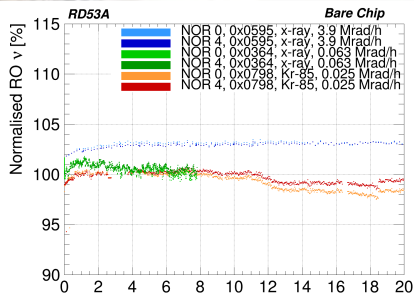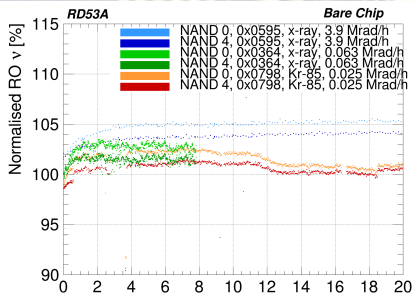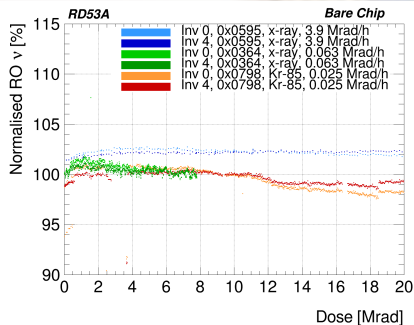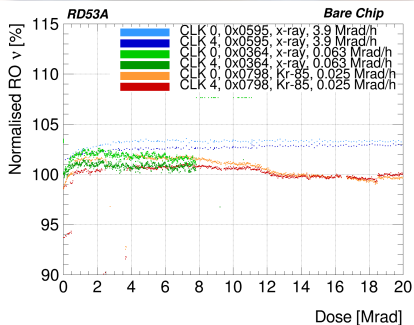

Comparing high and low dose rate - extrapolating the value of the delay

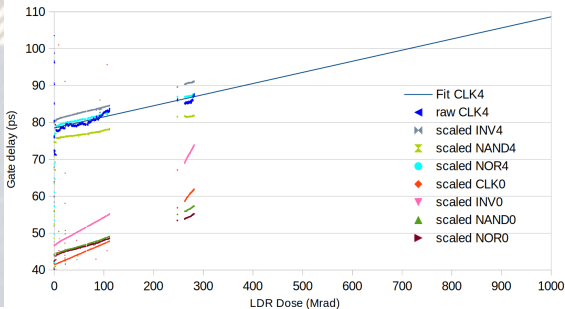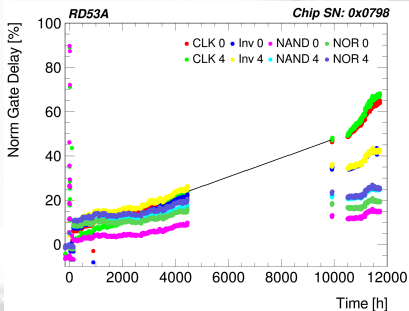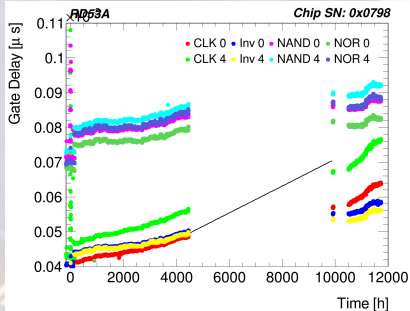


Comparing high and low dose rate - extrapolating the value of the delay

| | 500 Mrad | | | |
|-------------|------------------------------------|--|---|---------------------------------|
| | % Delay degradation | | | |
| | Glasgow HDR (experimental data) | ETH HDR FIT (radiation up to 100Mrad, fit to 500Mrad) | ETH LDR FIT (radiation up to 50Mrad, fit to 500Mrad) | 500Mrad model tt 0C 1.2V NVT |
| Dose rate | 4Mrad/h | 751 krad/h | 100 krad/h | 9Mrad/h |
| Temperature | - 15°C | - 10°C | - 10°C | 0°C |
| VDDD | 1.2V | 1.2V | 1.2V | 1.2V |
| CLKN_D0 | 16% | 32% | 69% | 133% |
| CLKN_D4 | 9% | 12% | 25% | 96% |
| INV_D0 | 20% | 39% | 88% | 133% |
| INV_D4 | 11% | 15% | 33% | 92% |
| NAND4_D0 | 13% | 24% | 46% | 138% |
| NAND4_D4 | 8% | 11% | 21% | 77% |
| NOR4_D0 | 17% | 27% | 58% | 133% |
| NOR4_D4 | 12% | 16% | 30% | 68% |

| | 1000 Mrad | | | 500 Mrad model |
|-------------|------------------------------------|--|---|---------------------------------|
| | % Delay degradation | | | 500Mrad model tt 0C 1.2V NVT |
| | Glasgow HDR (experimental data) | ETH HDR FIT (radiation up to 100Mrad, fit to 1Grad) | ETH LDR FIT (radiation up to 50Mrad, fit to 1Grad) | |
| Dose rate | 4Mrad/h | 751krad/h | 100krad/h | 9Mrad/h |
| Temperature | - 15°C | - 10°C | - 10°C | 0°C |
| VDDD | 1.2V | 1.2V | 1.2V | 1.2V |
| CLKN_D0 | 32% | 67% | 141% | 133% |
| CLKN_D4 | 18% | 25% | 51% | 96% |
| INV_D0 | 39% | 80% | 177% | 133% |
| INV_D4 | 21% | 32% | 66% | 92% |
| NAND4_D0 | 27% | 52% | 97% | 138% |
| NAND4_D4 | 18% | 24% | 44% | 77% |
| NOR4_D0 | 36% | 57% | 118% | 133% |
| NOR4_D4 | 26% | 34% | 61% | 68% |

High Dose Rate vs Low Dose Rate

- Plenty of data to analyze!
- Low dose rate irradiations with Co-60 from CMS side in Zagreb (3 chips at 0 C and 3 chips at 10 C)
- High and low dose rate irradiations at ETH (CMS) with x-rays

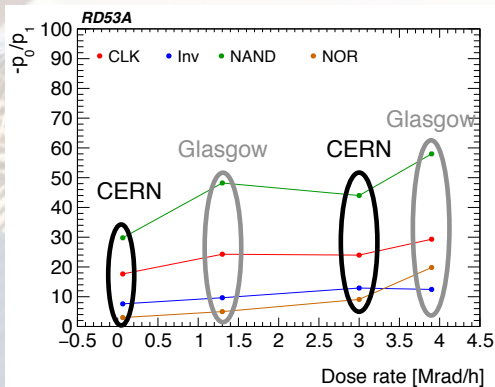

- Discussing with Dima (Glasgow) when their new x-ray tube arrives
- Plan to have different dose rates, ideally 2 chips with same dose rate
 - dose rate 3 Mrad/h, 1 Mrad/h, 0.5 Mrad/h, 0.1 Mrad/h, 0.025 Mrad/h
 - small total dose